

HD1900 19-inch Widescreen LCD Monitor

# USERGUIDE





# Contents

<b>Using Your Gateway Flat-Panel Monitor</b>	<b>1</b>
Connecting your monitor	2
Attaching the base	2
Connecting video inputs	3
Connecting power	4
Connecting a security cable	4
Starting your monitor	5
Adjusting monitor settings	6
Using the monitor buttons	6
On-screen display options	7
Changing Windows screen settings	10
Changing color depth and screen resolution	10
Power management	11
Energy declaration	11
Maintaining	11
Troubleshooting	11
No power	11
No picture	12
Display colors are wrong	12
Picture has shadows or “ghosts”	12
Color is not uniform	13
Image is not sized or centered correctly	13
Your monitor has pixels that are always dark or too bright	13
Connecting a game console	13
Specifications	14
Video modes	15
<b>Safety, Regulatory, and Legal Information</b>	<b>17</b>
Environmental information	19



# Using Your Gateway Flat-Panel Monitor

- [Connecting your monitor](#)
- [Starting your monitor](#)
- [Adjusting monitor settings](#)
- [Changing Windows screen settings](#)
- [Power management](#)
- [Maintaining](#)
- [Troubleshooting](#)
- [Specifications](#)

# Connecting your monitor

To set up your monitor, first unpack the box, unwrap the components, attach the base, then make your cable connections.

## Attaching the base

► **To attach the base:**

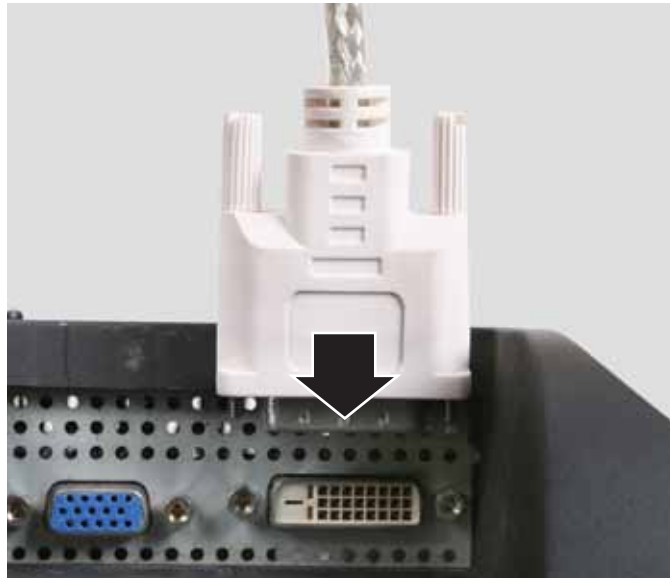
- Place the monitor base on a table top, then slide the monitor neck down onto the base until it clicks into place. You may need to press the button on the base to let the monitor slide on smoothly.



## Connecting video inputs

► To connect video sources to your monitor:

- 1 Position your computer and your monitor so you can reach the back of each.
- 2 If your computer has a digital video connector (DVI), connect a DVI video cable (not included) to the white connector on the display.



- OR -

Connect the blue VGA video cable to the blue connector on the display.



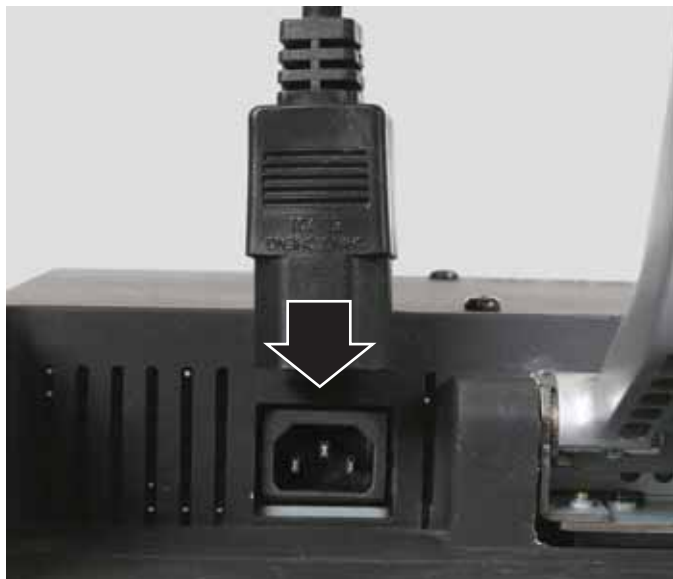
- 3 Make sure that your computer is turned off, then connect the other end of the video cable to the matching video port on the back of your computer.



## Connecting power

► **To connect power:**

- 1 Position your monitor so you can reach the back, then connect the power cord to the power connector under the back of your monitor.



- 2 Plug the power cord into a correctly grounded power outlet. We recommend using a surge protector to protect your monitor from voltage spikes.



## Connecting a security cable


You can secure your monitor to your computer desk (or to another heavy object) with a cable lock. To connect a cable lock, follow the cable lock's instructions to connect it to the Kensington lock slot on the back of your monitor (cable lock not included).

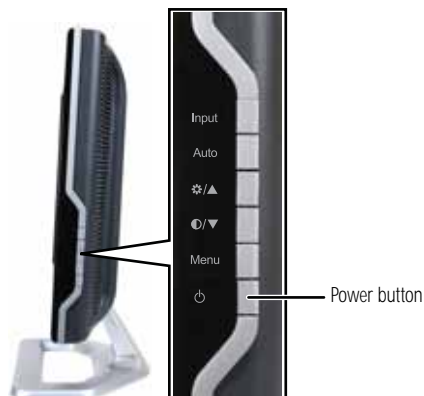




# Starting your monitor

► To start your monitor:

- 1 Press the  (power) button on the side of your monitor. The power LED in front of the power button turns on.



- 2 Turn on your computer. After your computer is running, the power LED on your monitor's power button should be blue. Allow about 10 seconds for the display image to appear. If the power LED is not blue or you do not see a display image, check the connections. For more troubleshooting information, see ["Troubleshooting" on page 11](#).
- 3 Adjust the tilt of your monitor for the best viewing angle.
- 4 Use the on-screen display (OSD) to adjust other monitor settings. For more information, see ["Adjusting monitor settings" on page 6](#).

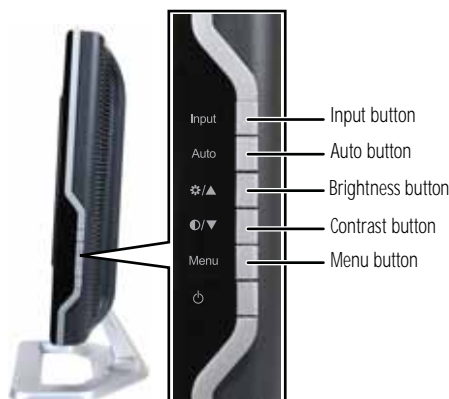


# Adjusting monitor settings

Use your monitor controls (located on your monitor itself) and computer controls (accessible through Windows) to adjust the display image. For more information about computer controls, see ["Changing Windows screen settings" on page 10](#).

## Using the monitor buttons

This monitor features an on-screen display (OSD) that lets you adjust contrast, brightness, and other settings for your monitor. Your monitor saves changes you make to the settings, even if you turn off your monitor.



- **Input**  
OSD active: Press to move to the previous menu.  
OSD inactive: Press to select the video source.
- **Auto**  
OSD active: Press to open a menu or setting.  
OSD inactive: Press to automatically optimize the monitor's image position, clock, and phase.
- **☀ / ▲ (brightness)**  
OSD active: Press to move up through menus and adjust OSD options.  
OSD inactive: Press to adjust the brightness.
- **● / ▼ (contrast)**  
OSD active: Press to move down through menus and adjust OSD options.  
OSD inactive: Press to adjust the contrast.
- **Menu**  
Press to open or close the OSD.

## On-screen display options




 


 

### Adjusting OSD settings

► To adjust the OSD settings:



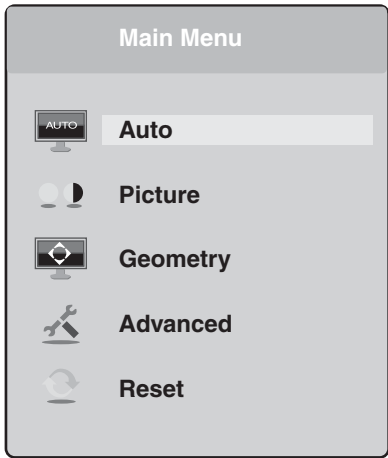
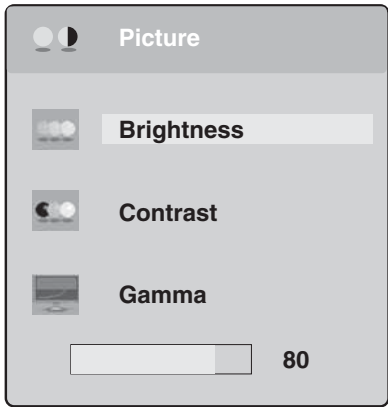
**Tip**

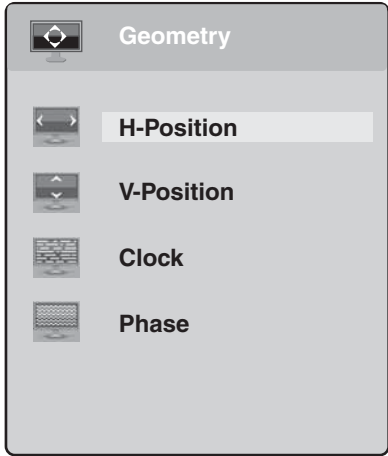
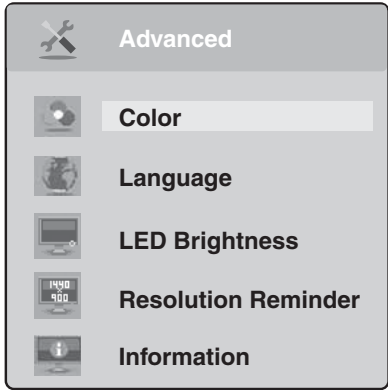
While the OSD is active, on-screen labels appear next to the buttons to help you identify them.

- 1 Press the **Auto** button. The display image is automatically adjusted to the ideal settings for your current screen resolution.
- 2 Press the **Menu** button. The OSD opens.
- 3 Press the  /  (brightness) or  /  (contrast) button to highlight a setting, then press the **Auto** button to open the selected menu or setting.
- 4 Press the  /  (brightness) or  /  (contrast) button to adjust the setting or change the option.
- 5 Press the **Input** button to return to a previous menu.
- 6 When you have finished making all adjustments, press the **Menu** button at the *Main Menu* to exit.



## OSD menus

OSD Menu	Description
<p><b>Main menu</b></p>  <p>The Main Menu OSD screen has a title bar 'Main Menu'. Below it are five options, each with an icon and a label: 'Auto' (monitor icon with 'AUTO' text), 'Picture' (two circles), 'Geometry' (monitor with crosshairs), 'Advanced' (wrench and screwdriver), and 'Reset' (circular arrow).</p>	<p><b>Auto</b>—Automatically adjusts your monitor to its optimum settings.</p> <p><b>Picture</b>—Opens the <i>Picture</i> menu, where you can adjust brightness, contrast, gamma, and video scaling.</p> <p><b>Geometry</b>—Opens the <i>Geometry</i> menu, where you can adjust image size and minimize distortions.</p> <p><b>Advanced</b>—Opens the <i>Advanced</i> menu, where you can adjust the color balance, change the OSD language, and display information about current monitor settings.</p> <p><b>Reset</b>—Resets the monitor to its factory settings.</p>
<p><b>Picture menu</b></p>  <p>The Picture menu OSD screen has a title bar 'Picture'. Below it are three options, each with an icon and a label: 'Brightness' (three circles), 'Contrast' (two circles), and 'Gamma' (monitor icon). At the bottom, there is a horizontal slider bar and the number '80'.</p>	<p><b>Brightness</b>—Adjusts the amount of light in the darkest portion of the picture. Use the lowest brightness setting you are comfortable with to maximize the life of the monitor backlights. You may need to readjust brightness after the monitor warms up.</p> <p><b>Contrast</b>—Adjusts the level of white between the lightest and darkest portions of an image.</p> <p><b>Gamma</b>—Customizes the gamma level. High gamma levels increase white levels and low gamma levels increase contrast.</p>

OSD Menu	Description
<p style="text-align: center;"><b>Geometry menu</b></p>  <p>The screenshot shows a menu titled 'Geometry' with a monitor icon. Below the title are four options, each with a small icon: 'H-Position' (horizontal arrows), 'V-Position' (vertical arrows), 'Clock' (a clock face), and 'Phase' (a grid pattern).</p>	<p><b>H-Position</b>—Moves the display image left and right. You can also press the <b>Auto</b> button to configure the horizontal position automatically.</p> <p><b>V-Position</b>—Moves the display image up and down. You can also press the <b>Auto</b> button to configure the vertical position automatically.</p> <p><b>Clock</b>—Minimizes any vertical bars or stripes visible on the screen background. The horizontal screen size will also change.</p> <p><b>Phase</b>—Minimizes any horizontal distortion and clears or sharpens the displayed characters.</p>
<p style="text-align: center;"><b>Advanced menu</b></p>  <p>The screenshot shows a menu titled 'Advanced' with a wrench and screwdriver icon. Below the title are five options, each with a small icon: 'Color' (color wheel), 'Language' (globe), 'LED Brightness' (monitor with light bar), 'Resolution Reminder' (monitor showing 1440x900), and 'Information' (info icon).</p>	<p><b>Color</b>—Customizes the color levels.</p> <p><b>Language</b>—Changes the language of the OSD.</p> <p><b>LED Brightness</b>—Changes the brightness of the Standby and Power LED to Day Mode or Nite Mode.</p> <p><b>Resolution Reminder</b>—If the computer display input is not set to 1440 × 900, displays a reminder that you should change your computer's settings to use the optimum 1440 × 900 resolution. If you prefer using your monitor at a resolution less than that, use this option to turn off the Resolution Reminder. For information on changing your computer's display resolution, see <a href="#">"Changing Windows screen settings" on page 10</a>.</p> <p><b>Information</b>—Displays the current screen resolution.</p>

# Changing Windows screen settings

Adjusting the color depth and screen area are two of the most basic display settings you may need to change. You can also adjust settings such as the screen background and screen saver.

## Changing color depth and screen resolution

*Color depth* is the number of colors your computer uses to display images on your monitor. Most images look best displayed with the maximum number of colors available. If the color in your images seems “false” or “jumpy,” especially after you have played a game or run a video-intensive program, check the color depth setting and return it to the highest color setting, if necessary.

*Screen resolution* is the number of pixels (individual colored dots) your computer uses to display images on your monitor. The higher the resolution, the more information and screen components (such as icons and menu bars) can be displayed on your monitor.



### Help

For more information about adjusting the screen, click **Start**, then click **Help and Support**. Type **adjusting monitor settings** in the **Search Help** box, then press **ENTER**.

#### ► To change the color depth or screen resolution in Windows Vista:

- 1 Click **Ⓜ (Start)**, **Control Panel**, then under **Appearance and Personalization**, click **Adjust Screen Resolution**. The *Display Settings* dialog box opens.
- 2 To change the color depth, click the **Colors** list, then click the color depth you want.
  - **Low (8-bit)** = 256 colors
  - **Medium (16-bit)** = 65,500 colors
  - **Highest (24-bit)** = 16,700,000 colors
- 3 To change the screen resolution, drag the **Resolution** slider to the size you prefer.
- 4 Click **Apply**. If the new settings do not look right, click **No**. If the new settings make the screen illegible and you cannot click **No**, the settings return to their previous values after several seconds.
- 5 Click **OK**, then click **Yes** to save your changes.



#### ► To change the color depth or screen resolution in Windows XP:

- 1 Right-click any empty space on the desktop, then click **Properties**. The *Display Properties* dialog box opens.
- 2 Click the **Settings** tab.
- 3 To change the color depth, click the arrow button to open the **Color quality** list, then click the color depth you want.
  - **Low (8-bit)** = 256 colors
  - **Medium (16-bit)** = 65,500 colors
  - **Highest (24-bit)** = 16,700,000 colors
- 4 To change the screen resolution, drag the **Resolution** slider to the size you prefer.
- 5 Click **OK**, then click **Yes**.



# Power management

## Energy declaration

When connected to a computer that supports the VESA Display Power Management Signaling (DPMS) Protocol, your monitor can conserve significant energy by reducing power consumption during periods of non-use. When your computer goes into the energy saving mode, your monitor will then enter the Active Off mode (sleep). In the Active Off mode the Power LED will still show orange.

Use these conventions and the power can be reduced to the following levels:

VESA State	LED Indicator	Power Consumption
On	Blue	< 38 W
Standby	Orange	< 2 W
Off	Off	< 1 W

To “wake” your monitor when it is in Standby/Active Off mode, move the mouse or press any keyboard key.

You can change your monitor’s power management settings using the Windows Control Panel. For more information, see your computer’s *User Guide*.

## Maintaining

To keep your monitor in optimal working order:

- Do not block the ventilation holes.
- Do not expose your monitor to rain or use near water.
- Keep your monitor away from radiators or heat vents.
- Keep your monitor out of direct sunlight.



### Caution

Do not use any type of abrasive pad or glass cleaner. You will permanently scratch the screen.

- To clean your monitor, use a soft cloth slightly moistened with water only. Wipe the cabinet, screen, and controls.

## Troubleshooting



### Important

Make sure that your monitor has warmed up for approximately 30 minutes before making any judgments about the picture quality.

If you have problems with your monitor, the information in this troubleshooting section may help you solve them.

### No power

Make sure that the power cord is connected correctly to both the back of your monitor and the power outlet. For more information about connecting the power cord, see [“Connecting your monitor” on page 2](#).

## No picture

- Make sure that the power cord is connected correctly to both the back of your monitor and the power outlet. For more information about connecting the power cord, see [“Connecting power” on page 4](#).
- Make sure that the video cable is connected securely to both the back of your monitor and your computer. For more information about connecting the video cable, see [“Connecting video inputs” on page 3](#).
- Make sure that your monitor is turned on.
- If you have the monitor connected to your notebook’s video port, you have two options:
  - If your notebook supports dual displays, you can use both your notebook’s display and this monitor in extended desktop multi-monitor mode. See Windows Help to learn how to enable multiple monitors.
  - You can also use this monitor as your primary monitor and not use the notebook’s screen. Notebook computers typically have an **Fn** key combination that lets you toggle between your notebook’s display, an externally attached display, and both at the same time. See your notebook’s user guide for more information.
- If the power LED is orange:
  - Make sure that your computer is turned on.
  - Move the mouse or press any key on the keyboard to bring your monitor out of sleep mode.
  - Restart your computer with your monitor turned on.
  - Make sure that the video cable is not damaged.
  - Check the end of the video cable for any pins that might be bent or pushed in.
- Turn off your monitor and unplug the video cable from the back of your computer. Turn your monitor back on and wait for ten seconds. If your monitor is functioning correctly, a “No Signal” message appears. For more information about connecting the video cable, see [“Connecting video inputs” on page 3](#).

## Display colors are wrong

- Press the **Menu** button, then press the **Auto** button to automatically adjust the display image to the ideal settings.
- Restart your computer with your monitor turned on.
- Make sure that the video cable is connected securely to the back of your monitor and your computer. For more information about connecting the video cable, see [“Connecting video inputs” on page 3](#).
- Make sure that the video cable is not damaged.
- Check the end of the video cable for any pins that might be bent or pushed in.

## Picture has shadows or “ghosts”

- Press the **Menu** button, then press the **Auto** button to automatically adjust the display image to the ideal settings.
- Remove any extension cables or switchboxes.
- Make sure that the video cable is connected securely to both the back of your monitor and your computer. For more information about connecting the video cable, see [“Connecting video inputs” on page 3](#).
- Make sure that the video cable is not damaged.
- Check the end of the video cable for any pins that might be bent or pushed in.
- If you are using a VGA connection, make sure that you use the VGA cable that came with your monitor.



## Color is not uniform

- Press the **Menu** button, then press the **Auto** button to automatically adjust the display image to the ideal settings.
- Make sure that your monitor warms up for at least 30 minutes before making a final judgment about color uniformity or brightness.

## Image is not sized or centered correctly

- Press the **Menu** button, then press the **Auto** button to automatically adjust the display image to the ideal settings.
- Use the position controls to adjust the image. For instructions on how to adjust the display image position, see “Adjusting monitor settings” on page 6.
- If the image looks stretched or fuzzy, you must adjust the operating system’s display settings to match the monitor’s optimal (*native*) 1440 × 900 setting. For information on adjusting settings, see “Changing Windows screen settings” on page 10.
- If you are trying to select 1440 × 900 but it is not available in the Windows display control panel:
  - Make sure that your video card can display at 1440 × 900 resolution.
  - This may be caused by older video drivers on your computer. See the Gateway support Web site ([www.gateway.com](http://www.gateway.com)) for updated video drivers for your computer. You can also go directly to your video card’s support Web site for the most up-to-date video drivers. The Web sites for the major video card manufacturers are:  
ATI®: [www.amd.com](http://www.amd.com)  
Intel®: [www.intel.com](http://www.intel.com)  
Nvidia®: [www.nvidia.com](http://www.nvidia.com)
- If your games do not have support for widescreen displays:
  - Newer games are adding support for widescreen displays as the widescreen format becomes more popular. Check the game’s Web site for updates. You can also consult the following Web site for specific settings and options to configure older games to support widescreen: [www.widescreengamingforum.com](http://www.widescreengamingforum.com).  
Some adjustments may require you to make changes to the Windows System Registry. We recommend making a complete system backup before changing the System Registry.

## Your monitor has pixels that are always dark or too bright

- This condition is normal and inherent in the TFT technology used in active-matrix LCD screens. Gateway’s inspection standards keep these to a minimum. If you feel these pixels are unacceptably numerous or dense on your display, contact Gateway Customer Care to identify whether a repair or replacement is justified based on the number of pixels affected.

## Connecting a game console

- If you want to connect your game console to this monitor, use optional video cables (available at [www.gateway.com](http://www.gateway.com) if ordering from the United States). To determine the type of cable you need, see your gaming console’s documentation.

# Specifications

Specifications are subject to change without notice or obligation. Many products for Gateway and its subsidiaries are custom engineered by our suppliers to Gateway specifications and may vary from similarly marketed products.

<b>Panel size</b>	19 inches (diagonal)
<b>Panel type</b>	19-inch viewable TFT with glare coating
<b>Pixel resolution</b>	1440 × 900 (native)
<b>Pixel pitch</b>	0.0112 × 0.0112 inches (0.2835 mm × 0.2835 mm)
<b>Aspect ratio</b>	16:10
<b>Brightness</b>	300 cd/m <sup>2</sup>
<b>Contrast ratio</b>	1000:1
<b>Viewing angles</b>	160° horizontal 160° vertical
<b>Response time</b>	5 ms
<b>Lamp type/life</b>	50,000 hours
<b>Colors</b>	16.7 million
<b>OSD languages</b>	English, French, Spanish, Italian, Japanese
<b>Connections and inputs</b>	Analog (VGA): 15-pin mini d-sub VGA Digital (DVI-D): 24-pin DVI-D with HDCP AC power
<b>Cables</b>	15-pin mini d-sub analog VGA (included) 24-pin DVI-D (not included)
<b>Power consumption</b>	Normal operation: <38 W Standby (power-save): <2 W Off: <1 W
<b>Power input</b>	100-240 VAC, 50/60 Hz
<b>Power management</b>	Energy Star®
<b>Certifications</b>	UL, cUL, FCC Class B, NOM, and CE. VCCI where applicable.
<b>Wall mount bracket</b>	VESA 4 × 3.937 inches (4 × 100 mm)
<b>Dimensions</b>	17.52 × 15.36 × 7.04 inches (44.50 × 39.01 × 17.88 cm) with basic stand

## Video modes

Mode	Mode name and resolution	Horizontal frequency (kHz)	Vertical frequency (Hz)
1	VGA 640 × 350	31.469	70.087
2	VGA 640 × 480	31.469	59.941
3	VESA 640 × 480	37.861	72.810
4	VESA 640 × 480	37.500	75.000
5	VGA 720 × 400	31.469	70.087
6	VESA 800 × 600	35.156	56.250
7	VESA 800 × 600	37.879	60.317
8	VESA 800 × 600	48.077	72.188
9	VESA 800 × 600	46.875	75.000
10	VESA 1024 × 768	48.363	60.004
11	VESA 1024 × 768	56.476	70.069
12	VESA 1024 × 768	60.023	75.029
13	VESA 1280 × 1024	63.980	60.020
14	VESA 1280 × 1024	79.976	75.025
15	VESA 1440 × 900	55.935	59.887
16	VESA 1440 × 900	70.635	74.984



# Safety, Regulatory, and Legal Information

- [Important safety information](#)
- [Environmental information](#)
- [Regulatory compliance statements](#)
- [Notices](#)

# Important safety information



## Warning

Always follow these instructions to help guard against personal injury and damage to your Gateway product.



## Warning

Do not use Gateway products in areas classified as hazardous locations. Such areas include patient care areas of medical and dental facilities, oxygen-laden environments, or industrial facilities.

Your Gateway product is designed and tested to meet the latest standards for safety of information technology equipment. However, to ensure safe use of this product, it is important that the safety instructions marked on the product and in the documentation are followed.

## Setting up your system

- Read and follow all instructions marked on the product and in the documentation before you operate your system. Retain all safety and operating instructions for future use.
- Do not use this product near water or a heat source such as a radiator.
- Set up the system on a stable work surface.
- The product should only be operated from the type of power source indicated on the rating label.
- If your product has a voltage selector switch, make sure that the switch is in the proper position for your area. The voltage selector switch is set at the factory to the correct voltage.
- Openings in the monitor case are provided for ventilation. Do not block or cover these openings. Make sure you provide adequate space, at least 6 inches (15 cm), around the system for ventilation when you set up your work area. Never insert objects of any kind into the monitor ventilation openings.
- Some products are equipped with a three-wire power cord to make sure that the product is properly grounded when in use. The plug on this cord will only fit into a grounding-type outlet. This is a safety feature. If you are unable to insert the plug into an outlet, contact an electrician to install the appropriate outlet.
- If you use an extension cord with this system, make sure that the total ampere rating on the products plugged into the extension cord does not exceed the extension cord ampere rating.

## Care during use



## Warning

To prevent electric shock, never remove the cover. No user serviceable parts inside. Refer servicing to qualified service personnel.

- Do not walk on the power cord or allow anything to rest on it.
- Do not spill anything on the system. The best way to avoid spills is to avoid eating and drinking near your system.
- Do not expose the monitor to rain or use near water. If the monitor does get exposed to moisture, unplug it and allow it to dry for 24 hours. Call Gateway Customer Care for advice on whether the monitor is safe to turn back on.
- When the monitor is turned off, a small amount of electrical current still flows through the monitor. To avoid electrical shock, always unplug all power cables and modem cables from the wall outlets before cleaning the system.
- Unplug the system from the wall outlet and refer servicing to qualified personnel if:
  - The power cord or plug is damaged.
  - Liquid has been spilled into the system.
  - The system does not operate properly when the operating instructions are followed.
  - The system was dropped or the cabinet is damaged.
  - The system performance changes.

## Replacement parts and accessories

Use only replacement parts and accessories recommended by Gateway.

# Environmental information

## EPA ENERGY STAR®



As an ENERGY STAR Partner, Gateway has determined that this product meets or exceeds the ENERGY STAR 4.1 performance guidelines for computer energy efficiency and power management.

ENERGY STAR Power Management (standard in the Windows operating system) places inactive components (CPU, hard drives, and other components except memory) into a low-power Sleep mode. Sleep mode uses less energy to run your computer, saves on your energy costs, and helps protect the environment by reducing greenhouse gas emissions.

Your computer was shipped with Sleep mode enabled. While your computer is in Sleep mode, the power indicator flashes. To use your computer after it has entered Sleep mode, move the mouse, press a key on the keyboard, or press the power button to "wake" it up.

For more information about the power management features of your Gateway desktop computer, see "Changing power-saving settings" in the online *User Guide*.

For more information about the power management features of your Gateway notebook, see "Managing Power" in the online *Reference Guide*.



### Help

For more information about Sleep mode in Windows Vista, click **Start**, then click **Help and Support**. Type **sleep** in the **Search Help** box, then press **ENTER**.

## Recycling



### (Hg) Warning

THE LAMP IN THIS DISPLAY CONTAINS MERCURY. DISPOSE ACCORDING TO LOCAL, STATE, AND FEDERAL LAW.

The product you have purchased contains extracted natural resources that have been used in the manufacturing process. This product may contain substances known to be hazardous to the environment or to human health.

To prevent releases of harmful substances into the environment and to maximize the use of our natural resources, Gateway provides the following information on how you can responsibly recycle or reuse most of the materials in your "end of life" product.

Waste Electrical and Electronic Equipment (commonly known as WEEE) should never be disposed of in the municipal waste stream (residential garbage collection). The "Crossed-Out Waste Bin" label affixed to this product is your reminder to dispose of your "end of life" product properly.



Substances such as glass, plastics, and certain chemical compounds are highly recoverable, recyclable, and reusable. You can do your part for the environment by following these simple steps:

- When your electrical or electronic equipment is no longer useful to you, "take it back" to your local or regional waste collection administration for recycling.
- In some cases, your "end of life" product may be "traded in" for credit towards the purchase of new Gateway equipment. Call Gateway to see if this program is available in your area.
- If you need further assistance in recycling, reusing, or trading in your "end of life" product, you may contact us at the Customer Care number listed in your product's user guide and we will be glad to help you with your effort.

Finally, we suggest that you practice other environmentally friendly actions by understanding and using the energy-saving features of this product (where applicable), recycling the inner and outer packaging (including shipping containers) this product was delivered in, and by disposing of or recycling used batteries properly.

With your help, we can reduce the amount of natural resources needed to produce electrical and electronic equipment, minimize the use of landfills for the disposal of "end of life" products, and generally improve our quality of life by ensuring that potentially hazardous substances are not released into the environment and are disposed of properly.

For additional recycling information specific to your area, please go to [www.gateway.com/recycle.html](http://www.gateway.com/recycle.html).

# Regulatory compliance statements

## United States of America

### Federal Communications Commission (FCC) Unintentional emitter per FCC Part 15

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio and television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment to an outlet on a different circuit from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

Compliance Accessories: The accessories associated with this equipment are: shielded video cable. These accessories are required to be used in order to ensure compliance with FCC rules.

### FCC declaration of conformity

Model: HD1900



#### Caution

Changes or modifications not expressly approved by Gateway could void the FCC compliance and negate your authority to operate the product.



#### California Proposition 65 Warning

This product contains chemicals known to the State of California to cause cancer, birth defects, and/or other reproductive harm. For additional information regarding this product warning, go to [www.gateway.com/prop65](http://www.gateway.com/prop65).

Responsible party:

Gateway, Inc.  
7565 Irvine Center Drive  
Irvine, CA 92618 USA

This device complies with Part 15 of the FCC Rules. Operation of this device is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## Canada

### Industry Canada (IC) Unintentional emitter per ICES-003

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the radio interference regulations of Industry Canada.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de Classe B prescrites dans le règlement sur le brouillage radioélectrique édicté par Industrie Canada.



# Notices

© 2008 Gateway, Inc.  
All rights reserved.

Gateway, Inc.  
7565 Irvine Center Drive  
Irvine, CA 92618 USA  
All Rights Reserved

This publication is protected by copyright and all rights are reserved. No part of it may be reproduced or transmitted by any means or in any form, without prior consent in writing from Gateway.

The information in this manual has been carefully checked and is believed to be accurate. However, changes are made periodically. These changes are incorporated in newer publication editions. Gateway may improve and/or change products described in this publication at any time. Due to continuing system improvements, Gateway is not responsible for inaccurate information which may appear in this manual. For the latest product updates, consult the Gateway Web site at [www.gateway.com](http://www.gateway.com). In no event will Gateway be liable for direct, indirect, special, exemplary, incidental, or consequential damages resulting from any defect or omission in this manual, even if advised of the possibility of such damages.

In the interest of continued product development, Gateway reserves the right to make improvements in this manual and the products it describes at any time, without notices or obligation.

## Trademark acknowledgments

Gateway and eMachines are trademarks or registered trademarks of Gateway, Inc. in the United States and other countries. All other brands and product names are trademarks or registered trademarks of their respective companies.





MAN HD1900 USR GDE R0 5/08



8513019



8 27103 14887 9